

Care instructions for decorative boards

Care and cleaning:

The board can be used in a normal way and does not need any special care.

What to do if the board has dust, dirt, fingerprints, chalk, tea or coffee stain, or something similar on it:

Light stains can be removed with a soft and humid cloth or a soft sponge.
When cleaning wet, please wipe again over the surface using an absorbent paper towel.

Stronger stain can be removed with soad sud or domestic liquid detergents. Cleanser with rubbing effects should not be used!
In order to avoid streaks, detergents should be removed completely after a short residence time.
We recommend: the darker the décor the more should the detergent be watered down.

Persistent stains can be removed with e.g. Magic Eraser, Mr. Clean.
You can also work with organic solutions, like for example acetone or spirit. This could however lead to streaks!
Stains caused by lime could be removed with watered down vinegar-based cleaner.
We recommend: the darker the décor the more should the detergent be watered down.

Generally a long residence time should be avoided as it affects the surface.